

Audio System

► With navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

► Without navigation system

n Basic operation



- 1 Power/Volume
- 2 Audio sources
- 3 Sound quality modes
 - Listening position
 - Automatic Sound Levelizer (ASL)
 - Rear seat entertainment system lock (if equipped)

n Audio sources

AM·SAT: AM radio/Satellite radio*

FM: FM radio

DISC: CD player

*: The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM[®] Satellite Radio broadcasts. (Subscription is required. For detailed information, see the Owner's Manual.)

n Radio



- 1 Seek
- 2 Scan
 - All radio stations: press
 - Preset radio stations: press and hold
- 3 Traffic information
- 4 RDS genre select
- 5 Radio tuner
- 6 Text messages
- 7 Station presets

n Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

n CD player

n Playing an audio CD



- 1** Scan
All tracks in current disc: press
First track of each CD: press and hold
- 2** Eject
- 3** Random playback
Current disc: press
All discs: press and hold
- 4** Repeat
Current track: press
Current disc: press and hold
- 5** Disc load
- 6** Disc select
- 7** Text information
- 8** Track select/rewind/fast-forward

n Playing a CD with MP3/WMA files



- 1** Scan
All files in current folder: press
First file of each folder: press and hold
- 2** Eject
- 3** Random playback
Current folder: press
All folders: press and hold
- 4** Repeat
Current file: press
All files in current folder: press and hold
- 5** Folder select
- 6** Disc load
- 7** Disc select
- 8** Text information
- 9** File select



n Loading a CD

- 1** Press the LOAD button.
WAIT is shown on the display.
- 2** Insert a CD when the indicators on the slot turn from amber to green.
The display changes from WAIT to LOAD.

n Loading multiple CDs

- 1** Press and hold the LOAD button until you hear a beep.
WAIT is shown on the display.
- 2** Insert a CD when the indicators on the slot turn from amber to green.
The display changes from WAIT to LOAD.
The indicators on the slot turn to amber when the CD is inserted.
- 3** Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press the DISC button.

n Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1** Power on/change mode: press
Power off: press and hold
- 2** Volume
- 3** Radio: radio tuner
CD: disc/track/file (MP3/WMA) select

Rear Seat Entertainment System (If Equipped)


The rear seat entertainment system is designed to allow the rear passengers to enjoy audio and DVD video that is separate from the front audio system.

n Location of the components



- 1 Front audio system
- 2 Display
- 3 Headphone volume control dials and headphone jacks
- 4 DVD player
- 5 A/V input adapter
- 6 Power outlet
- 7 Remote control
- 8 Power outlet main switch

n Opening the display

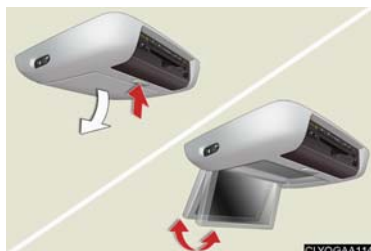

Press the lock release button.

The angle can be adjusted between 90° and 125°.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

n Unit

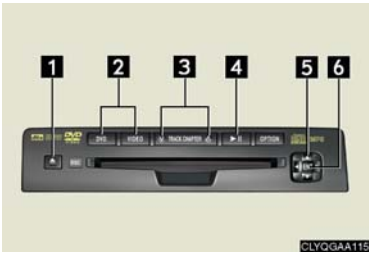

- 1 Eject
- 2 Mode select (power on)
- 3 Track/chapter select
- 4 Play/pause
- 5 Cursor position
- 6 Enter

n Remote control



- 1 Mode select (power on)
- 2 Cursor position
- 3 Enter
- 4 Track/chapter select
- 5 Play/pause
- 6 Rewind
- 7 Title/disc menu number search
- 8 Power off
- 9 Folder select
- 10 Fast-forward
- 11 Stop

Air Conditioning System

► With navigation system

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

► Without navigation system



- 1 Driver side temperature control
- 2 Switch to automatic mode
- 3 Driver side temperature display
- 4 Passenger side temperature display
- 5 Windshield defog/defrost
- 6 Passenger side temperature control

- 7 Dual mode switch
- 8 Air flow controls
- 9 Fan speed controls
- 10 A/C switch
- 11 Outside air/recirculated air mode switch
- 12 OFF button

n Using the automatic mode



- 1 Press the AUTO button.
- 2 Adjust the temperature using the TEMP button.

n Adjusting the temperature in DUAL mode



In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the DUAL button.
- 2 Adjust the driver side temperature using the TEMP button, and the passenger side temperature using the PASSENGER TEMP button.

Garage Door Opener


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

Programming HomeLink®

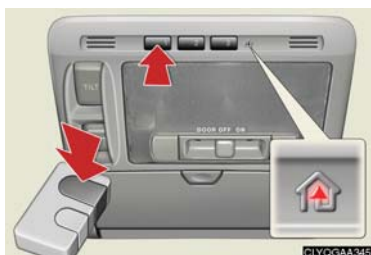

- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
 - 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.
- If the door does not open, press and release the same button once again.

n Programming other devices

For U.S.A. owners:


To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

n Operating HomeLink®

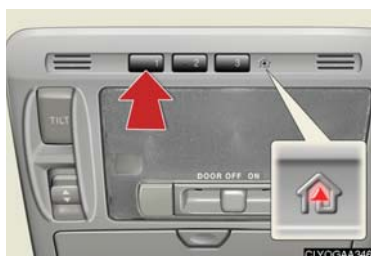

Press the appropriate HomeLink® button.
The indicator light should come on.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Console Boxes

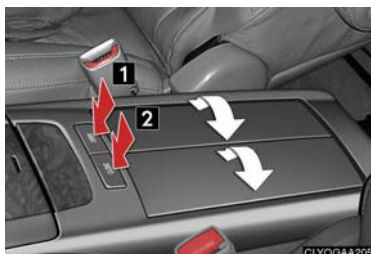


► Front

1 Opens

2 Closes

To adjust the position of the front console box, open the cup holder lid and slide the console box while lifting the lever.

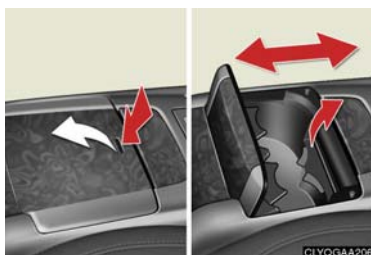

► Rear (if equipped)


To open, pull up the knob and lift the armrest.



► Overhead console


To open, press the lid.

Cup Holders

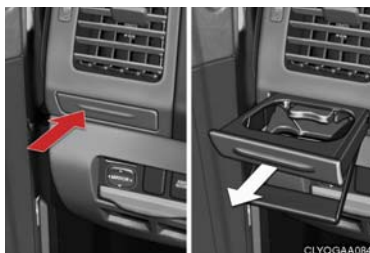


► Front (type A)

To open, press in and release.

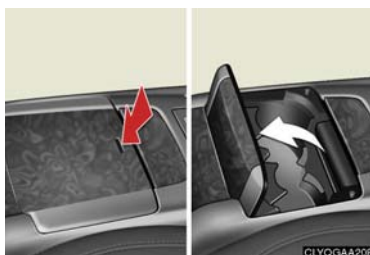

► Front (type B-1)

To open, press down on the rear of the lid.

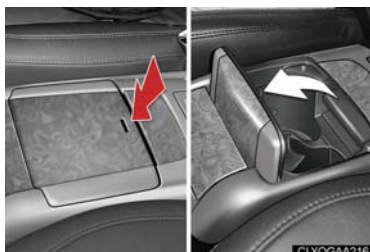

► Front (type B-2)

To open, press down on the rear of the lid.



► Rear

To open, press the lock release button.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Glove Box

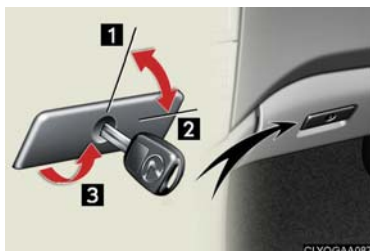

- 1 Unlock
- 2 Lock
- 3 Open: pull the lever


The glove box can be locked and unlocked using the master key.

Seat Heaters (If Equipped)



- 1 Press the knob to pop out.
"L": Driver's seat
"R": Front passenger's seat
- 2 Turn the knob to adjust the seat temperature.

Compass

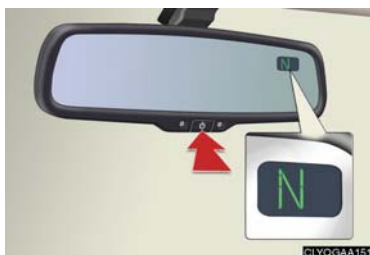

To display the compass, press the button.

To cancel the display, press the button again.



Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

